



N70CBPAL

PNEUMATIC PALLET NAILER
FOR MACHINE MOUNTED OPERATION ONLY

** Note that item 30 does not include the the actuator which responds to the remote signal. Customer to select the actuator required from the OPERATION and MAINTENANCE MANUAL. An actuator is not included with the tool.

† Assemble driver to main piston with Loctite #271, available as part #851325 Loctite 271 Packet.

Spare Parts for N70CBPAL

Item#	Illus. #	Description
N80139	1	FRAME (MUSTARD YELLOW)
N70118	2	SEAL, CYLINDER CAP
103942	3	CAP,CYLINDER ASSEMBLY
N80161	4	PISTON STOP
104059	5	HEAD VALVE
101256	6	SPRING,COMPRESSION
101236	7	O-RING,2.250X.115
MRG041630	8	O-RING,1.638X.118
T55031	9	RING, BUMPER
MSC6100-25	11	SCREW,SHCS,M6X1.00X25
MSF8125-25	13	SCREW, SFHCS M8 X 1.25X25
102506	14	COVER,EXHAUST
MPP030020	28	PIN,SPIROL M3X20MM
TVA1	30	KIT,TRIGGER VALVE
N86134A	30	CYLINDER CAP
103650	36	CAP,END
MRG049431	37	O-RING,2.343X.118
102631	39	ASSEMBLY,REPLACEMENT DRIVER
102630	39	ASSEMBLY,DRIVER/PISTON
N70133	39	PISTON,MAIN
851439	40	O-RING,1.689X.190
100065	42	N70 SLEEVE ASSEMBLY
N80169	42	SEAL,CHECK
N80168	42	RING,CYLINDER
N70171	42	SLEEVE,CYLINDER
N70155	43	CYLINDER SEAL
MRG084431	46	O-RING,3.323X.122
N70156	47	BUMPER - A
N70157	48	BUMPER - B

107834	49	SEAL,NOSE
105033	50	GUIDE,DRIVER
107867	51	CASTING,NOSE
MPP030016	52	PIN,SPIRAL,M3X16
N70121	53	FEED PAWL
N50087	54	PIN,SPECIAL(STEP)
854023	55	SPRING,TORSION
854004	56	WASHER
MRG009824	57	O-RING,.386X.094
N70166	58	FEED PISTON
851437	59	O-RING,.819X.095
854039	60	COMPRESSION SPRING
N70162	61	STOP, FEED PISTON
N70163	62	SPRING COLLAR
MRB026	63	RETAINING RING, METRIC
N70164	64	PIN,SPECIAL
N70122	65	DOOR MACHINING
N70149	66	PAWL CHECK
854011	67	COMPRESSION SPRING
N70140	68	PIN,SPECIAL(STEP)
N70150	69	LATCH DOOR
101408	70	SPRING,COMPRESSION
MPG030012	71	PIN, ROLL 3 X 12
MSC8125-28	72	SCREW, SHCS M8X28MM METRIC
851880S	96	LABEL,STANLEY BOSTITCH
851817	97	LABEL,WARNING
851438	98	O-RING,2.236X.115