



## SJ10 SencoMaticStapler

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • ERSATZTEILE-LISTE • LISTE DE PIÈCES DE RECHANGE

<b>PART #</b>	<b>DESCRIPTION</b>	<b>DESCRIPCIÓN</b>	<b>BESCHREIBUNG</b>	<b>DÉSIGNATION</b>
AB0099	MAIN BODY ASSY.	ASAMBLE DE CARCASA	GEHÄUSE-ZUSAMMENBAU	CORPS D'ASSEMBLÉE
BA0141	VALVE	VÁLVULA	VENTIL	VALVE
BC0141	RETAINER	JUNTA TÓRICA	SICHERUNGSRING	RETENUE
BC0220	TUBES	TUBO	RÖHRE	TUBE
BC0324	SEAL	SELLO	DICHTUNG	JOINT
BF0028	SEAL	SELLO	DICHTUNG	JOINT
BF0057	VALVE	VÁLVULA	VENTIL	VALVE
BF0064	BUMPER	AMORTIGUADOR	PUFFER	ARRÊT
BF0192	SPACER	SEPARADOR	DISTANZSTÜCK	ENTRETOISE
BF0194	HOUSING	ALOJAMIENTO	GEHÄUSE	CORPS
CA0093	VALVE ASSEMBLY	ASAMBLE DE VÁLVULA	VENTIL-ZUSAMMENBAU	VALVE D'ASSEMBLÉE
CA0094	VALVE/MOTOR ASSEMBLY	ASAMBLE DE VÁLVULA/MOTOR	VENTIL/MOTOR-ZUSAMMENBAU	VALVE/MOTEUR D'ASSEMBLÉE
CC0126	CORE	VÁSTAGO	VENTILSTIFT	NOYAU
CC0127	CAP	TAPA	KAPPE	BOUCHON
CC0128	HOUSING	ALOJAMIENTO	GEHÄUSE	CORPS
CC0145	SEAL	SELLO	DICHTUNG	JOINT
KB0024	SCREW	TORNILLO	SCHRAUBE	VIS
LB0010	SEAL	SELLO	DICHTUNG	JOINT
LB0013	SEAL	SELLO	DICHTUNG	JOINT
LB0019	SEAL	SELLO	DICHTUNG	JOINT
LB0020	SEAL	SELLO	DICHTUNG	JOINT
LB0760	SEAL	SELLO	DICHTUNG	JOINT
LB0779	SEAL	SELLO	DICHTUNG	JOINT