TU216-80

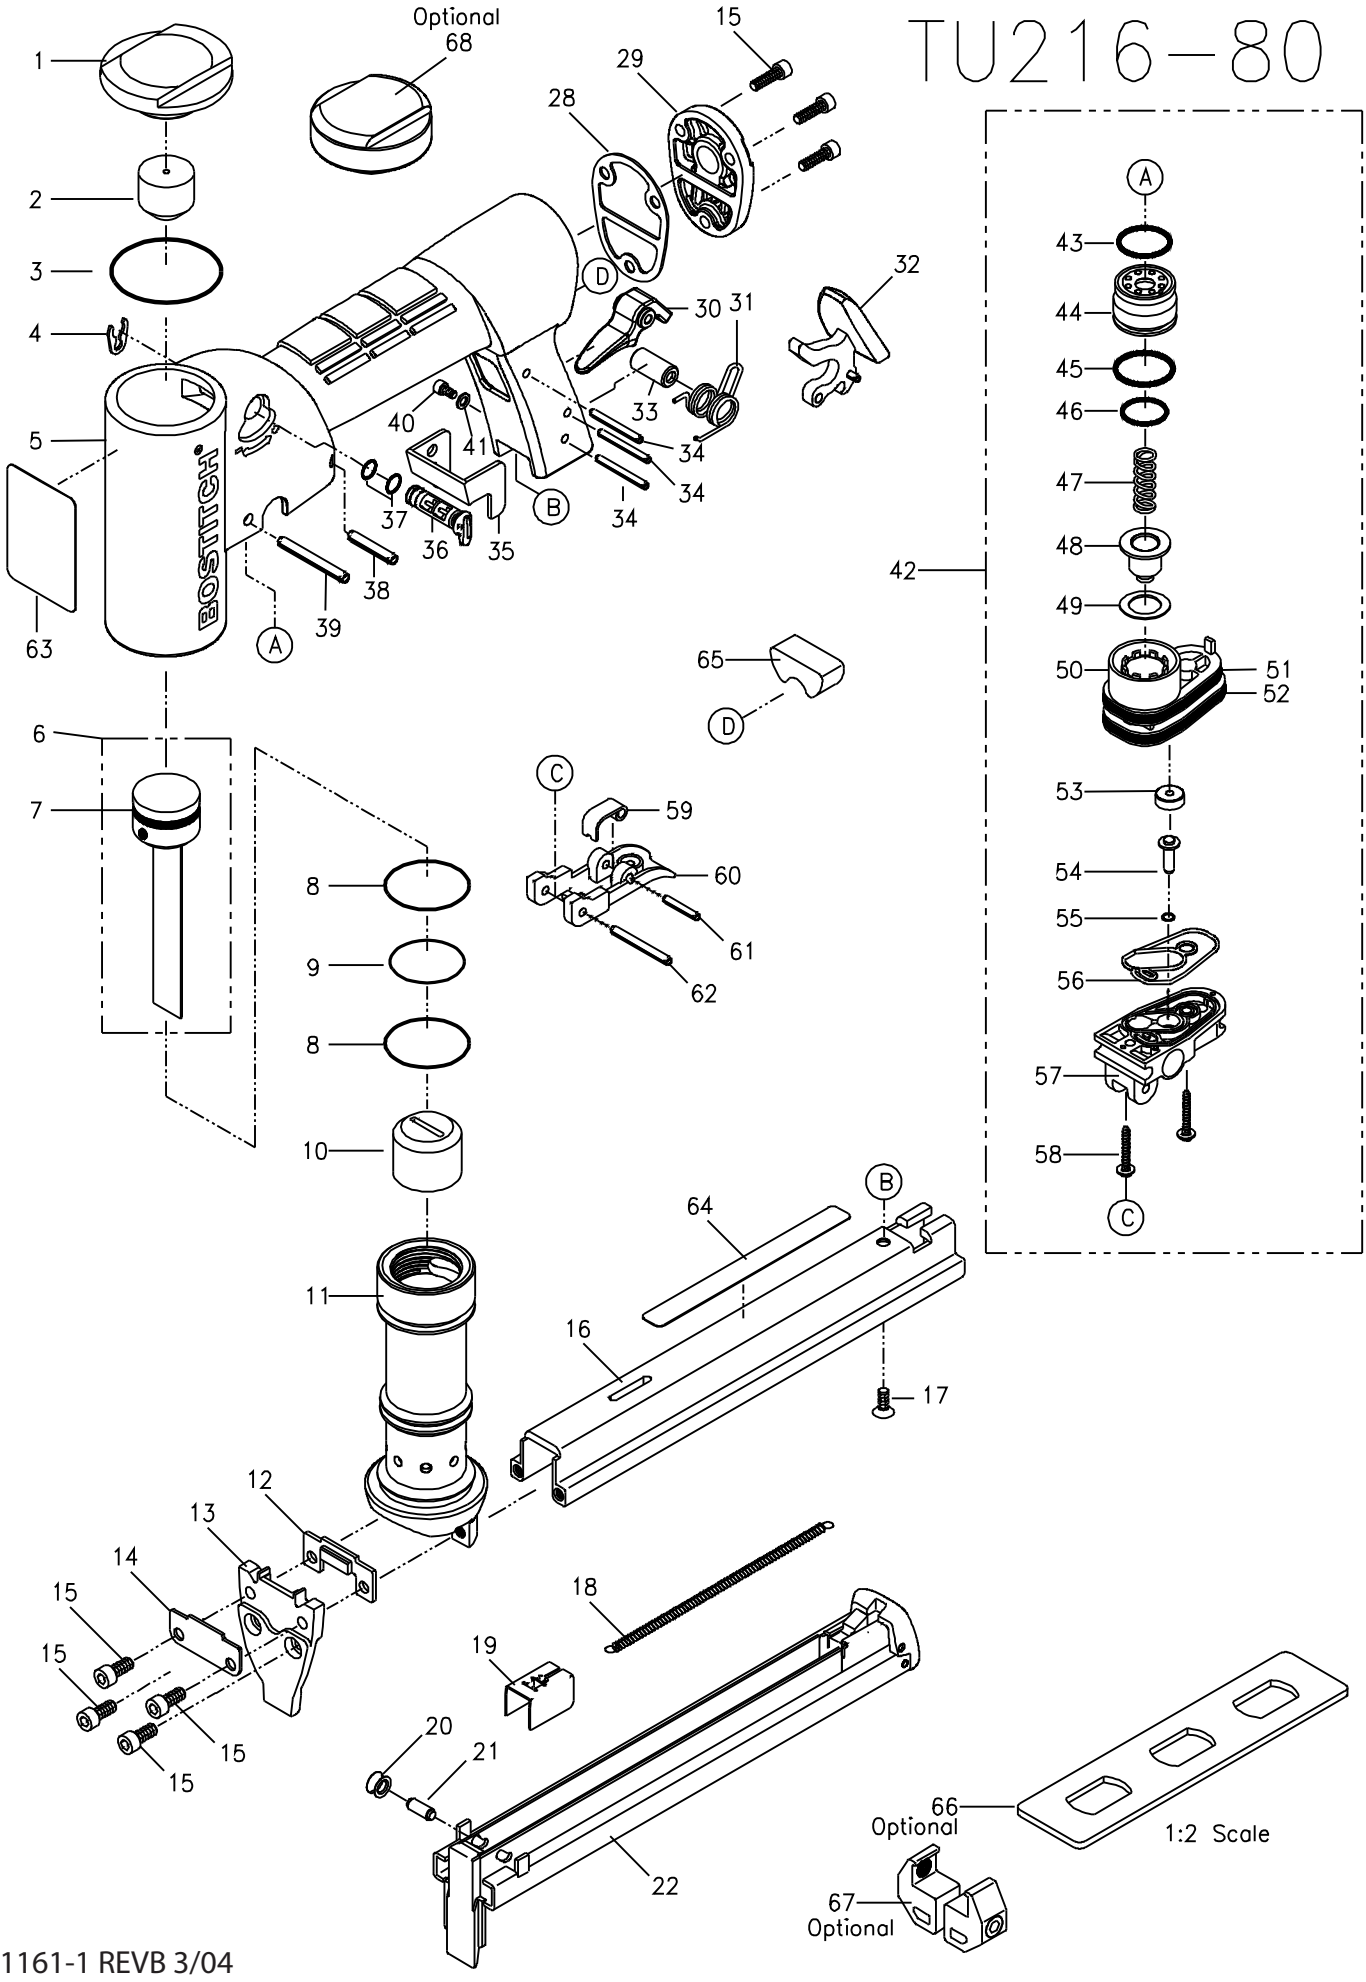

IP1161-1 REVB 3/04

BOSTITCH

	TU216-80	Parts List:		IP1161-2REVB	
	(DC217002-1)				
	To be Used with tool parts illustration:			IP1161-1REVB	
	and operation and maintenance manual:			121265	
		Serial Number on the Tool:		TU216-80 2235	000 and Higher
ITEM	PART #	DESCRIPTION	ITEM	PART #	DESCRIPTION
01	P2145203262	Cap	38	S2904018000	Spiral Pin
02	P2140001400	Bumper , Piston Stop	39	S2904030000	Spiral Pin
03	S06A002700	O-Ring	40	S0110410100	Hex. Soc. Hd. Bolt
04	P2145201062	Clip	41	S0410400	Spring Washer
05	G4208000	Frame Unit	42	G1201300	Trigger Unit
06	G0307000	Driver Unit	43	S06A001600	O-Ring
07	S06P001802	O-Ring	44	P2142003100	Head Valve
08	S06A012100	O-Ring	45	S06Z003500	O-Ring
09	S06A002200	O-Ring	46	S06Z003600	O-Ring
10	P2140001200	Bumper	47	P2145201562	Spring, Head Valve
11	P2140000163	Sleeve, Cylinder	48	P2140000300	Seal, Exhaust
12	P2176301065	Plate, Driver Guide	49	P2140004200	Seal Washer
13	P2176300765	Nose	50	P2140004100	Housing, Head Valve
14	P2145204362	Plate, Nose	51	S06A012400	O-Ring
15	S0110414100	Hex. Soc. Hd. Bolt	52	S06A012500	O-Ring
16	P2170000663	Magazine	53	P2140005400	Seal, Trigger Stem
17	S0310414100	Flat Hd. Soc. Screw	54	P2142003300	Stem
18	P2145202662	Spring, Pusher	55	S06A000200	O-Ring
19	P2176100357	Pusher	56	P2140000766	Seal, Valve
20	P2145202962	Roller	57	P2140004066	Housing , Trigger
21	P2175200462	Pin, Roller	58	S1310316100	Button Cross Hd. Screw
22	G2605500	Core Magazine Assb	59	P2145200462	Plate, Trigger
28	P2140003400	Gasket, End Cap	60	P2180000366	Trigger
29	P2140001340	Cap, End	61	S0803014000	Spring Pin
30	P2140002066	Latch, Inside	62	S0803020000	Spring Pin
31	P2145203062	Spring, Torsion	63	B214002001	Warning Label (158577)
32	P2140001966	Latch Unit Assb	64	B217011001	Product Label (158554)
33	P2140004666	Spring Busher	65	P2140005800	Muffler
34	S3203022000	Spiral Pin	66	P2146305665	Wrench (Optional)
35	P2146304465	Stop Plate	67	P2140005700	Skirt Gauge Assb (Optional)
36	P2140000666	Valve, Energy Control	68	P2145205962	Heavy Cap (Optional)
37	S06S000600	O-Ring			